


## 1967-72 Chevy Truck Gauge Panel installation instructions.

- 1) Remove the stock gauge cluster from your vehicle.
- 2) Tape off the window & any other vulnerable areas.
- 3) Cut the two notches on the right & left hand sides of the dash.
- 4) Install all gauges into dash insert except speedometer & tachometer.
- 5) Attach the provided 10-32 studs into the back of the dash insert & attach to the dash using the provided 10-32 nuts.
- 6) Install the LED lights. The eraser end of a pencil works well, if you are having trouble getting them in all the way.
- 7) Install sending units and run wires to the dash. (please see instruction provided by the gauge manufacturer).
- 8) Connect all wiring & switches.
- 9) Install the speedometer & the tachometer.

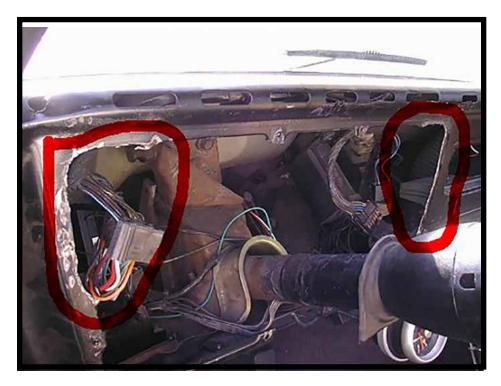

877-263-7377

www.boeseengineering.com